


HOOKER FURNITURE

COMPLETE BED ASSEMBLY FOR KING OR QUEEN

ITEM NUMBER:

152, 252, 354, 552, 654

162, 262, 364, 562, 664

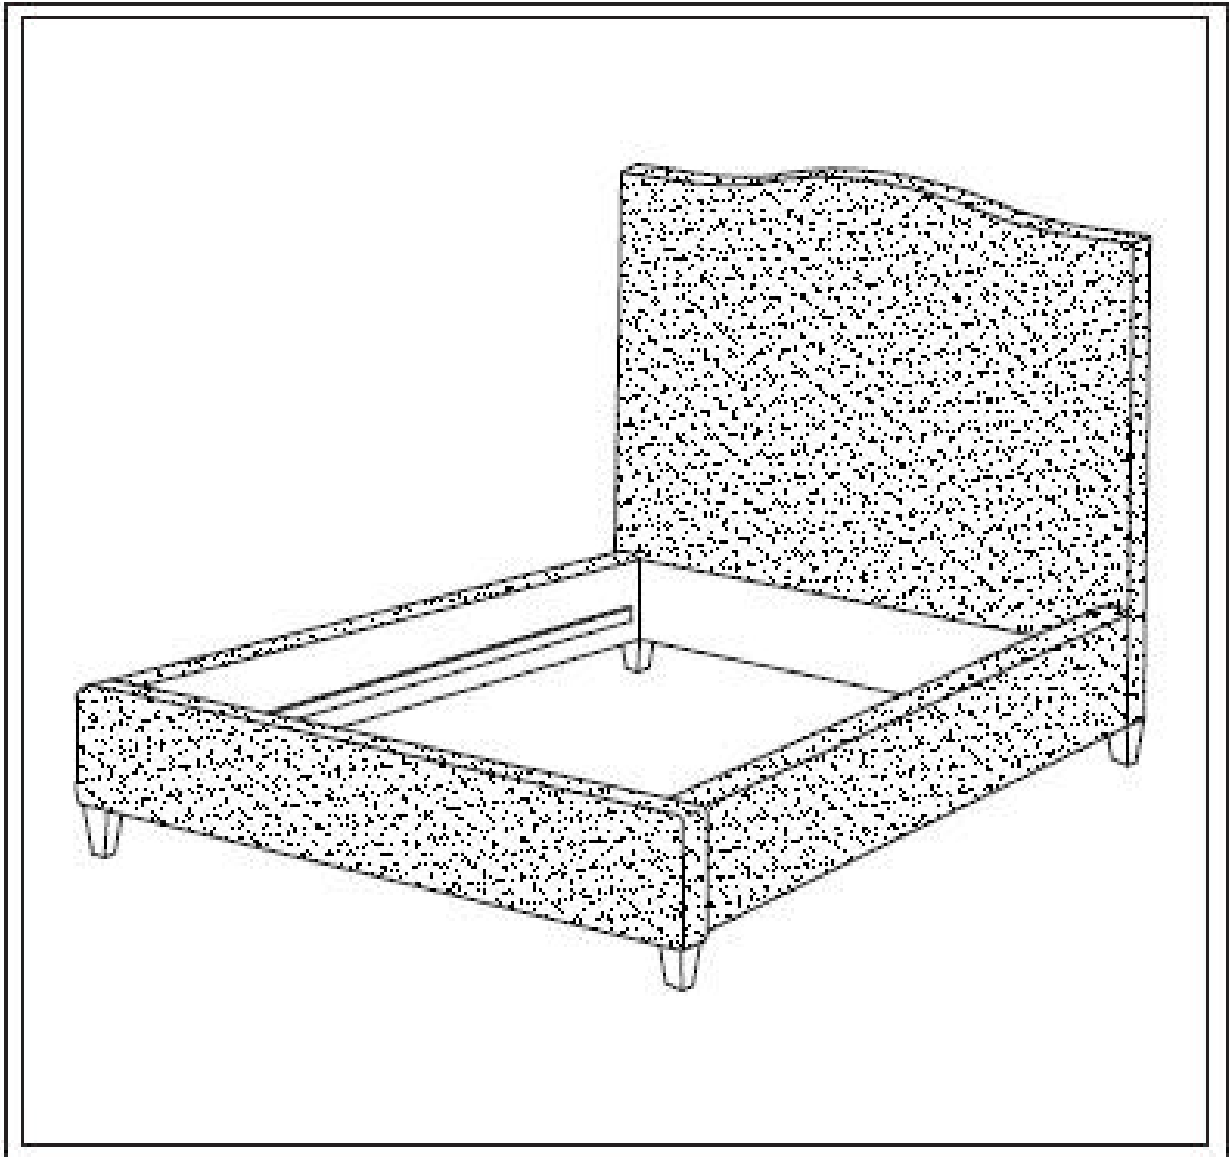



NOTE: It is best to put this bed together in the space where you will use it.

PRODUCTS ARE NOT INTENDED
FOR COMMERCIAL USE
UPDATED 09/2016


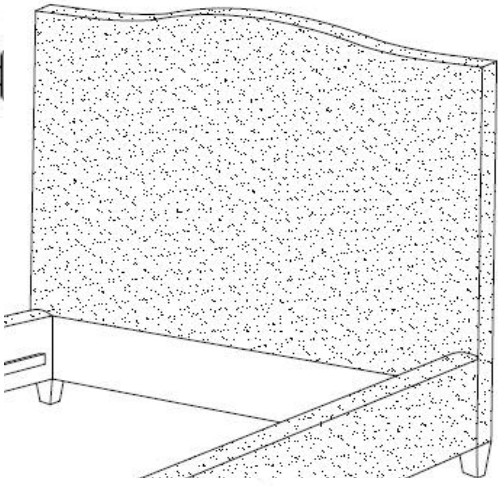
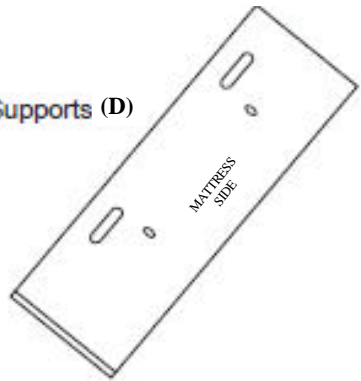
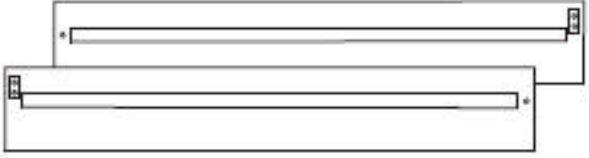
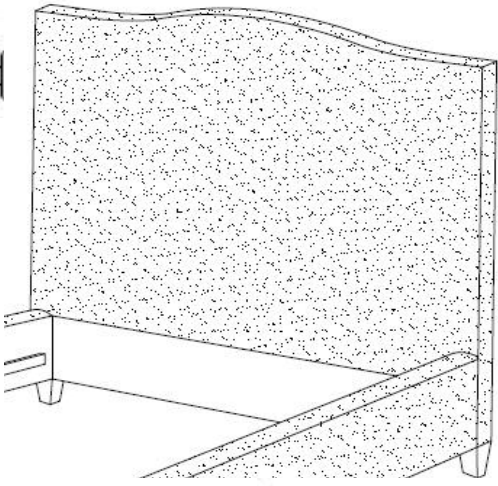
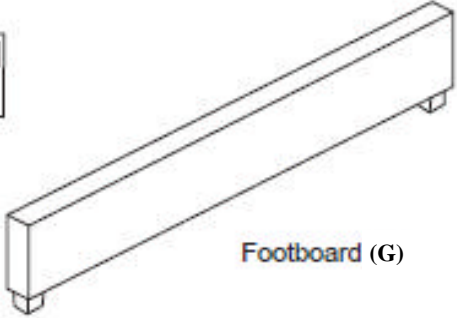
MADE IN USA

PAGE 1 OF 5



Ltr.	Qty.	Hardware Included	
A	16		Screws
B	8		Rubber Washers

TOOLS NEEDED:
 -Requires 2 or more people.
 -Phillips screwdriver required.
 -Power drill suggested.

NOTE: It is best to put this bed together in the space where you will use it.


Ltr.	Qty.	Components	
C	8		
D	4		
E	1		
F	2		
G	1		
			
			

Before assembling the bed, you must turn the Side Rails (F) to the position you intend to use. If you are using a Mattress-Box Spring combination, see detail (1) below. If you are using a mattress only, see detail (2) below.

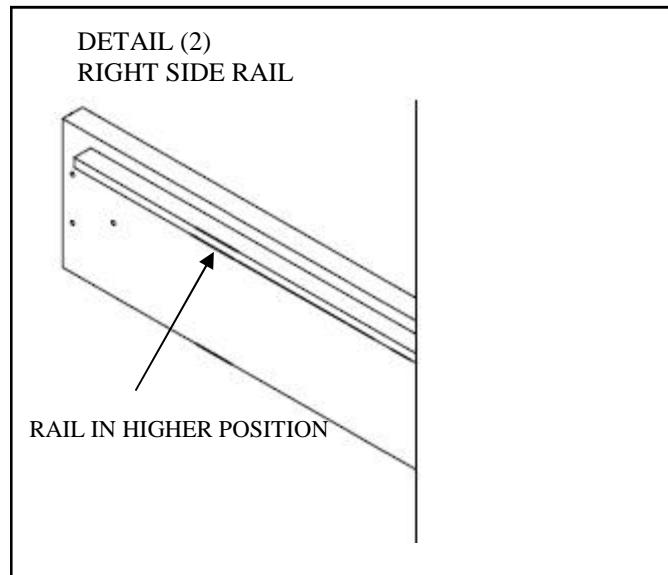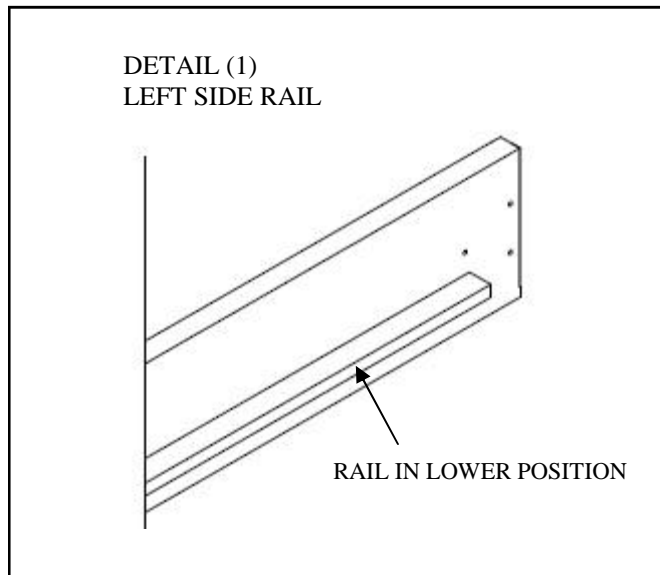


STEP 1: Attach the side rails (F) to the Headboard (E) by inserting the bolt heads at the end of the Side rails into the brackets on the Headboard. Push down to lock the bolts in place.
DO NOT force the Side rails into the brackets.

STEP 2: Repeat STEP 1 for attaching the footboard.

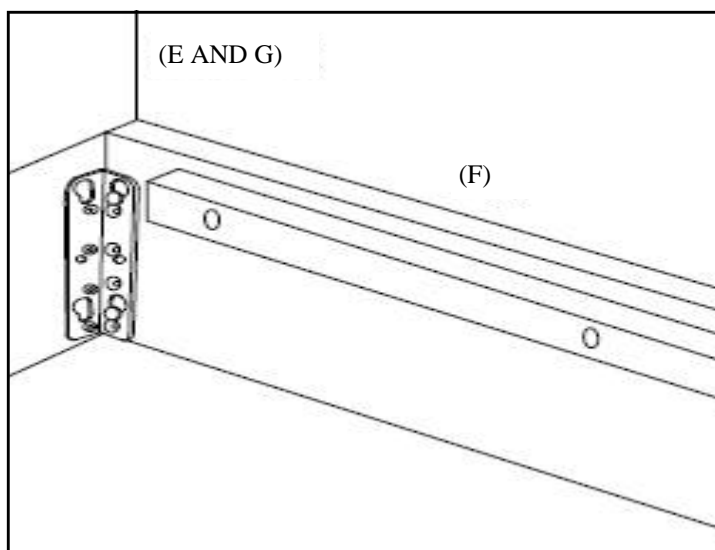

MATTRESS ONLY ASSEMBLY


STEP 3: If you are using a Mattress-Box Spring combination, skip to STEP 4. Attach the Support Legs (C) and Rubber Washers (B) to the Supports (D) center holes. Screw them into the side **WITHOUT** the metal hardware showing.

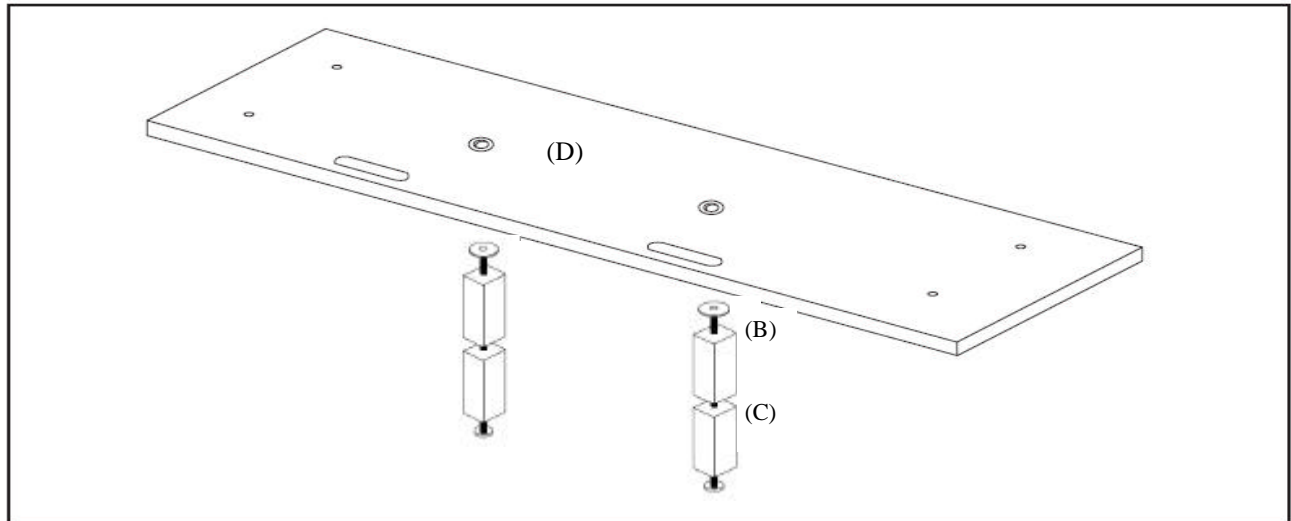

NOTE: The levelers at the bottom of the Support Legs (C) should be 3/4 unscrewed for hardwood floors and screwed all the way in for carpet.


MATTRESS-BOXSPRING ASSEMBLY

STEP 4: For a Mattress-Box Spring combination, remove the upper part of the Support Leg (C) and place Rubber Washers (B) to the bottom section of the leg (C). Screw the Support Legs (C) into the Support (D) making sure the side **WITHOUT** the metal hardware showing.

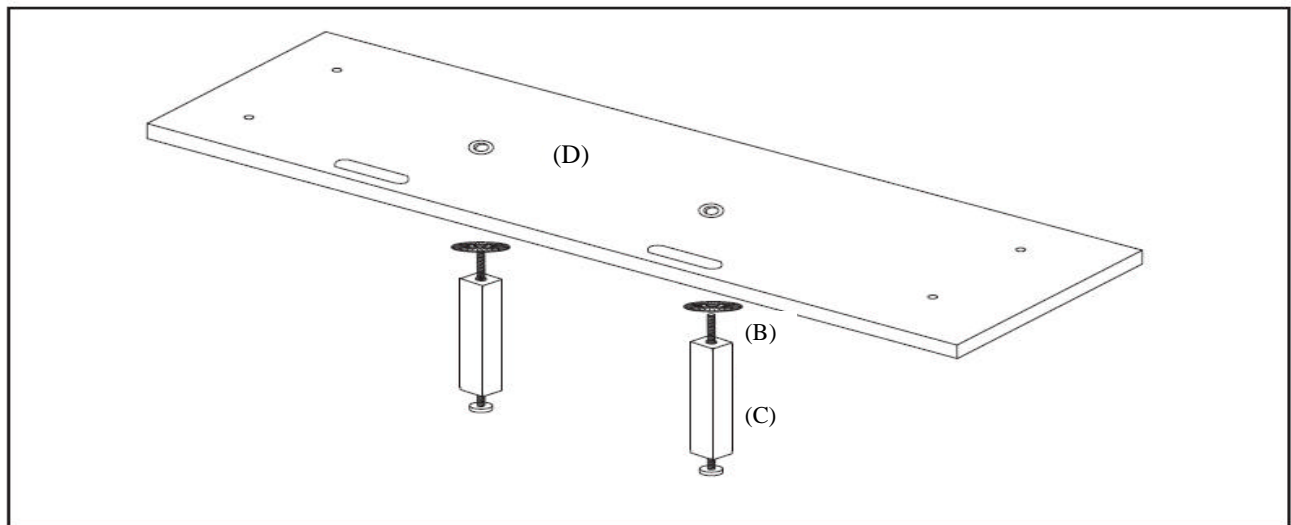

NOTE: The levelers at the bottom of the Support Legs (C) should be 3/4 unscrewed for hardwood floors and screwed all the way in for carpet.

STEP 5: Lay the Supports (D) on the Side Rails (F) Support Rails. Evenly space the Supports and then attach the ends to the rails using 2 Screws (A) per end.

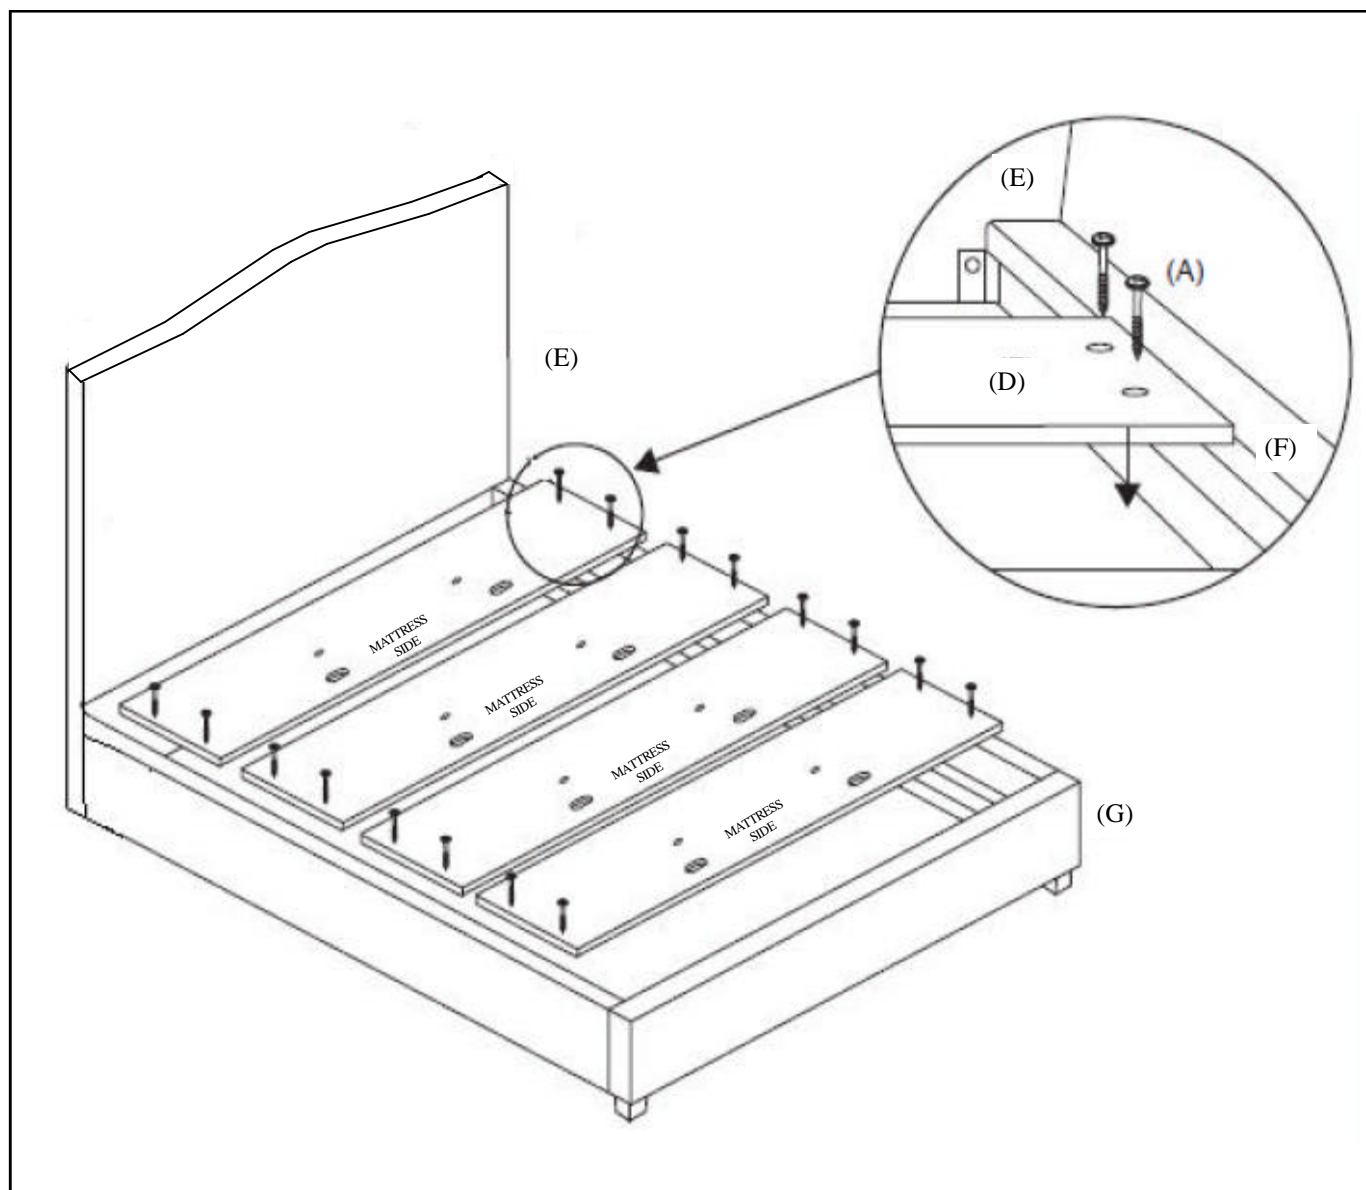

CLEAN & CARE:

Spot cleaning is suggested. The method of cleaning is different based on what upholstery fabric is used.